
### **DATA SHEET PROPORTIONER FD6000 GEN III** FOR STATIONARY EXTINGUISHING SYSTEMS.

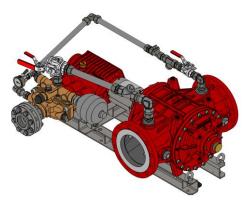

### 1. TECHNICAL DATA.

Туре	FD6000/0,5-S	FD6000/1-S	FD6000/3-S	FD6000/3/3-S
Proportioning rate	0.5 %	1 %	3 %	3% + 3% = 6%
Approvals	-	FM Approval PR452158 2)		
Flow directions of water motor	Horizontal: "left $\rightarrow$ right" or "right $\rightarrow$ left"			
	Vertical: "top $\rightarrow$ bottom" or "bottom $\rightarrow$ top"			
Min. water flow rate <sup>1)</sup>	330 l/min	330 l/min	350 l/min	400 l/min
Min. water flow rate FM	_	490 l/min	550 l/min	-
Max. water flow rate	6000 l/min			
Operating temperature <sup>3)</sup>	5° C – 50° C (standard version)			
	5 °C – 80 °C (High-Temp version) ×)			
Storage temperature	-20 °C – 80 °C			
Operating pressure	5 – 16 bar			
Weight <sup>4)</sup>				
Freshwater version	157 kg	163 kg	225 kg	285 kg
Seawater version ×)	312 kg	318 kg	380 kg	440 kg
ATEX classification <sup>x)</sup> for +5 °C $\leq$ T <sub>a</sub> $\leq$ +60 °C	ର୍ଭ୍ତେ II 2G Ex h IIC T4 Gb ଊ II 2D Ex h IIIC T130 ℃ Gb			

1) The nominal proportioning rate is achieved when reaching the specified minimum figure. Indication for proportioning of fluid Newtonian foam agents at operating pressure of 5 bar. For more detailed information, refer to page 2, item 3. "Minimum water flow rate".

2) For information regarding FM Approved data, please refer to www.approvalguide.com.

3) Operating temp. is the max. ambient and medium (foam and extinguishing water) temperature. Max. foam agent temp. is generally limited to 50 °C. 4) Weight indications are based upon the standard version in dry condition. Special versions will differ.

X) Optional equipment.

CE






Valid for selected product types.

www.firedos.com

# **FireDos**°


#### 2. PRESSURE LOSS.

Indication valid for operating pressure of 10 bar. For more information on different system conditions or proportioning rates, please contact us.

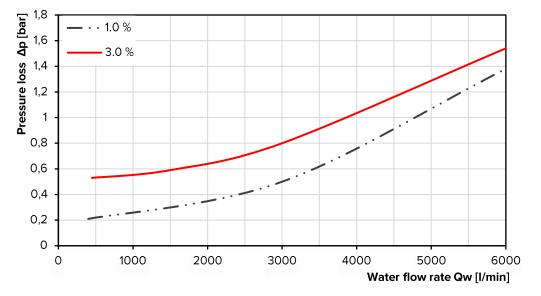

#### **3. MINIMUM WATER FLOW RATE.**


The following diagrams show the effect of the operating pressure and foam agent viscosity on the minimum water flow rate (valid for viscosities in the graph at para. 4).

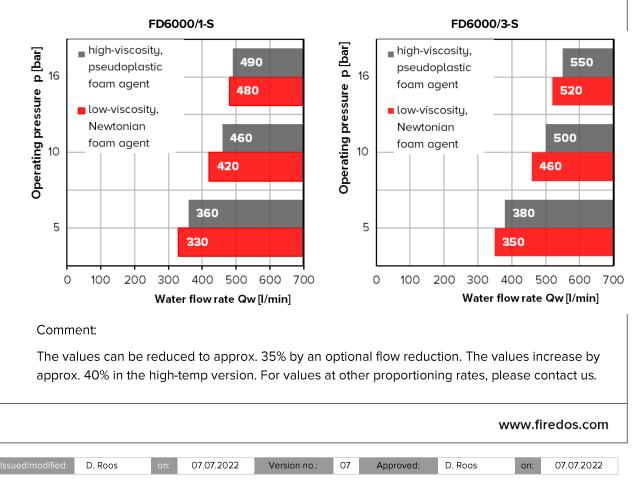

# **FireDos**<sup>®</sup>

#### 4. FOAM AGENT VISCOSITY.

*FireDos* proportioners are suitable for all foam agents available on the market. For reference regarding units with an FM Approval, please find the corresponding/associated range of dynamic viscosity below (www.approvalguide.com). Contact us if the dynamic viscosity of your foam agent is higher than the values in the diagram. Do not hesitate to request our support for the correct dimensioning of your suction line.

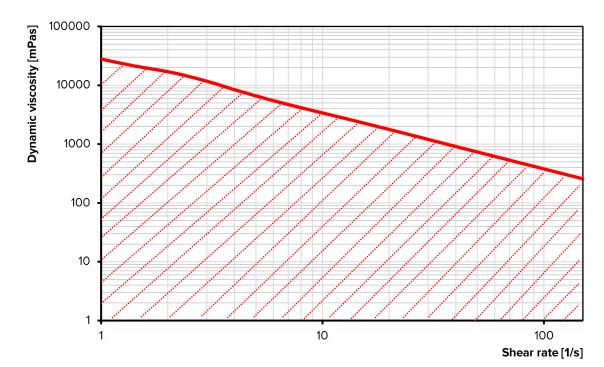

#### 5. MATERIALS.

	Freshwater version	Seawater version			
Water motor 4)	Cast Aluminium G-AISi7Mg HC-coated, AIMgSi1 HC-PTFE-coated, stainless steel 316 / 316Ti, POM, PVDF, NBR, FKM	Cast Bronze G-CuSn10, stainless steel 316 / 316Ti, Aluminium-Bronze CuAl10Fe5Ni5-C-GC, POM, PVDF, NBR, FKM			
Proportioning pump <sup>4)</sup>	Stainless steel 316 / SS316Ti / 318 LN, POM, FKM, Aluminium oxide ceramic Al2O3, Aluminium-Bronze CuAl10Ni5Fe5-C-GC				
Pipework <sup>4)</sup>	Stainless steel 316 / CF8M / SS316Ti, PTFE, FKM				
Support frame	Stainless steel 304 / 316				


4) media-exposed materials

www.firedos.com


### **FireDos**<sup>®</sup>

#### 6. FLOW DIAGRAM.

Proportioning rate 0.5% / 1% / 3%

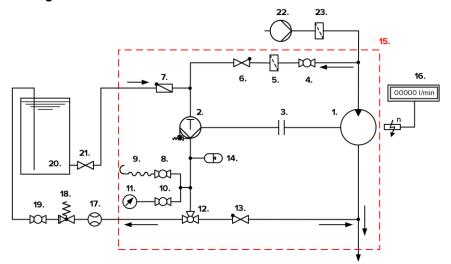

Proportioning rate 3% + 3% = 6%

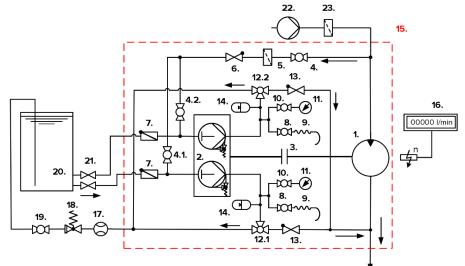



- 1. Water motor
- 2. Proportioning pump
- 3. Coupling
- 4. 2-way ball valve "Flushing/Priming"
- 4.1 "Flushing/Priming" pump head I
- 4.2 "Flushing/Priming" pump head II
- 5. Filter in the flushing line
- 6. Check valve in the flushing line
- 7. Non-return flap in the suction line
- 8. Air bleed valve
- 9. Air bleed hose
- 10. Shut-off valve pressure gauge
- 11. Pressure gauge
- 12. 3-way ball valve "Returning/Proportioning"
- X) Special version


- 12.1 "Returning/Proportioning" pump head I
- 12.2 "Returning/Proportioning" pump head II
- 13. Check valve in the proportioning line
- 14. Pulsation damper
- 15. Standard scope of supply of *FireDos* proportioner
- 16. Revolution counter with flow rate display <sup>x)</sup>
- 17. Flow meter for return line  $\times$
- 18. Pressure sustaining valve for return  $l^{(x)}$
- 19. 2-way ball valve in return line ×)
- 20. Foam agent supply
- 21. Shut-off valve in the suction line
- 22. Extinguishing water supply
- 23. Water filter

### **FireDos**<sup>®</sup>

#### 7. EXAMPLE FIGURE / DIMENSIONS.

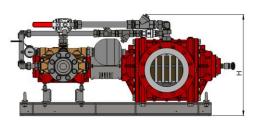

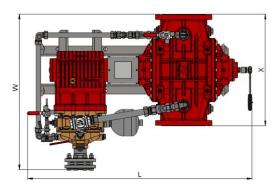

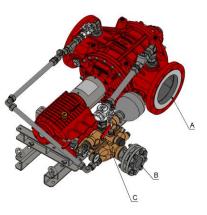

Туре	FD6000/0,5-S	FD6000/1-S	FD6000/3-S	FD6000/3/3-S
Proportioning rate	0.5 %	1 %	3 %	3% + 3% = 6%
Connection water motor A	Optionally: Flange DIN EN 1092-1, DN200 PN16 RF Flange ASME B16.5, 8" Class 150 RF			
Installation length water motor X <sup>5)</sup>	650 mm			
Connection suction line B	2" MT BSP 2" MT NPT <sup>X)</sup>	2" FT BSP 2" MT NPT <sup>X)</sup>	2.1/2" FT BSP Flange ASME B16.5 2.1/2" Class 150 <sup>X)</sup>	2x 2.1/2" MT BSP 2x Flange ASME B16.5 2.1/2" Class 150 <sup>X)</sup>
Connection return line C	3/4" FT BSP 3/4" MT NPT <sup>X)</sup>	1" FT BSP 1" MT NPT <sup>X)</sup>	1.1/2" FT BSP 1.1/2" MT NPT <sup>X)</sup>	2x 1.1/2" FT BSP 2x 1.1/2" MT NPT <sup>X)</sup>
Length L <sup>5)</sup>	1105 mm	1130 mm	1255 mm	1320 mm
Width W <sup>5)</sup>	700 mm	835 mm	930 mm	1050 mm
Height H <sup>5)</sup>	555 mm	570 mm	615 mm	785 mm

All figures are approximate only and depend on the particular version/equipment options.

X) Special version.

5) Further accessories to the proportioner may require more installation space.

Please allow sufficient accessibility of the proportioner for maintenance work. For assistance to ensure sufficient accessibility, please refer to our planning manual for proportioners.

#### 8. MANUFACTURER.

*FireDos* GmbH, Auf der Kaulbahn 6, 61200 Woelfersheim, Germany Phone +49 (0) 6036 9796-0, Email: info@firedos.de

We reserve the right to make modifications at any time.

www.firedos.com